

New Internal PRNDL Switch Location

Research by Scott MacWilliams, International Technical Consultant

In 2000, the location of the PRNDL Switch was moved to the inside of the transaxle. The part # for the new PRNDL Switch is **GM #24205999**.

This switch needs to be installed in the correct location. If the switch is not installed in the correct location, the vehicle may not start. One way to install this switch is with the Kent-Moore tool J-43708. However, the PRNDL Switch can also be installed in the correct location by using a bolt that has a 17mm head. Place the bolt between the valve body and the switch then tighten the bolts that hold the switch 71-124 in.lbs.

The pictures to the right show both procedures using the Kent-Moore tool and the bolt.

